 





A Make the football

Use pattern: Page2 to Page4.

- ① Cut out A1 by cutting along the lines.
- ★ Cut along the line marked

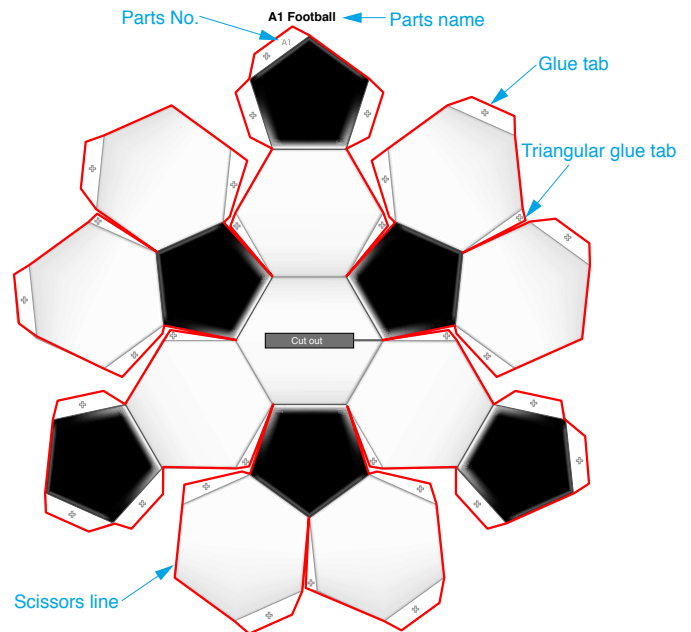

 - ② Cut out the parts to be removed on A1 and A2, and glue together.

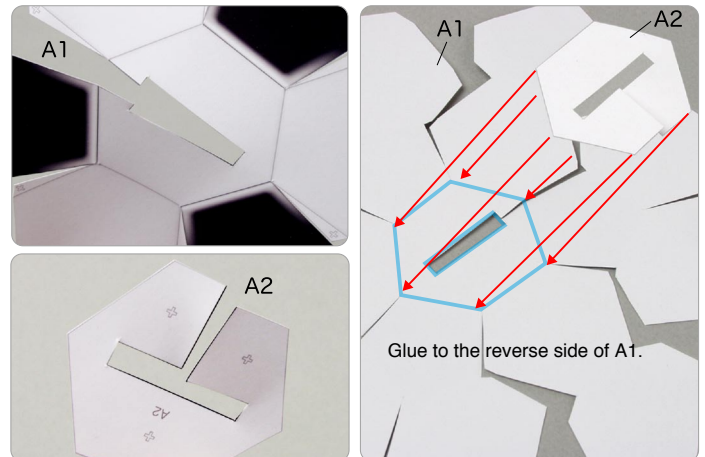

Tools	Notation Key
Scissors	Scissors line
Paste, or woodwork glue	Mountain fold
Stencil pen, or bodkin	Valley fold
Ruler	Glue spot
	A1, B1 Parts No.

 
◆ The Assembly instructions are divided into two blocks:
 A (football) and B (display stand/money holder).
 Follow the instructions for each block to assemble your football money box.

◆ ★ marks a basic assembly technique that remains the same regardless of the part.
 Instructions are printed only for the first instance.


<Caution>

- ※ Keep scissors and glue away from small children.
- ※ Be careful not to cut your fingers when using scissors.




- ③ The parts will be easier to assemble if curled.
- ★ Using the photo as a guide, move your fingers in the direction of the arrow, adjusting the pressure to curl the paper.

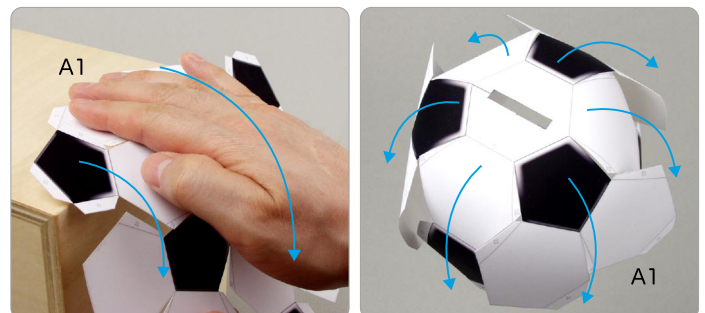

 - ④ Add a slight curl to A1 when attaching it.
- ★ Attach the triangular glue tabs so that the front side becomes convex.
- ★ Using the photo as a guide, attach in the direction of the arrow.

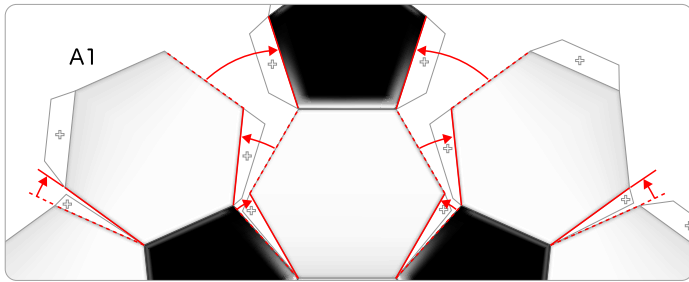

  
 
- ⑤ Attach A3, A4 and A5 to A1. Next, assemble A6, attach A3, A4 and A5 to it, and the football is complete.

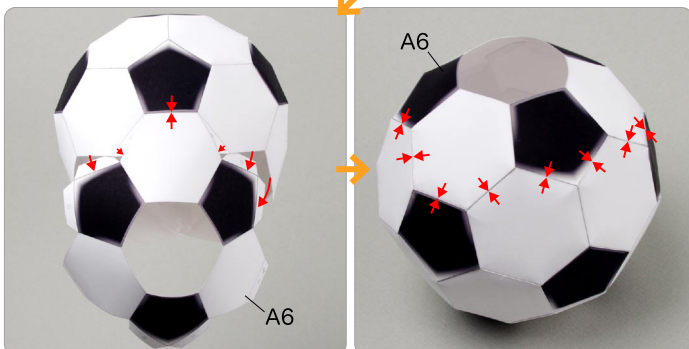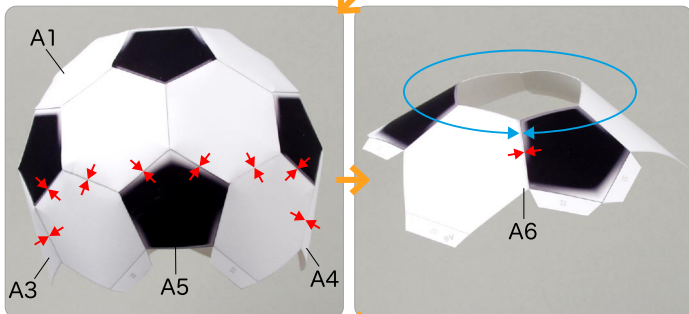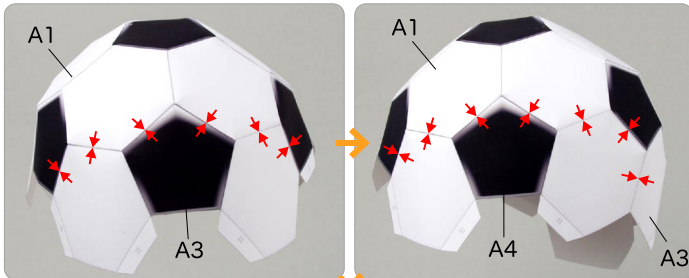





B Make the display stand/money holder

Use pattern: Page5 / Page6.

  - ① Make a mountain fold and valley fold on B1.
- ★ Trace along the mountain fold line and valley fold line with a stencil pen, scoring it to make it easier to fold.

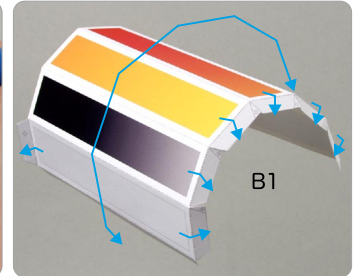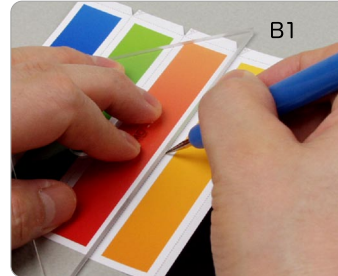

    - ② Assemble B1 and B2, and attach them together. Next, attach B2 to B3.

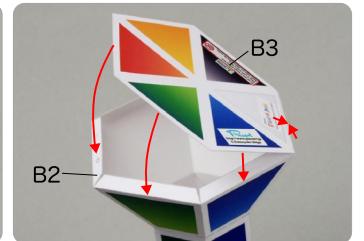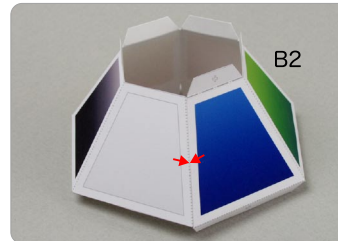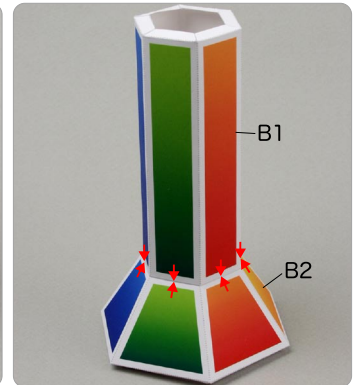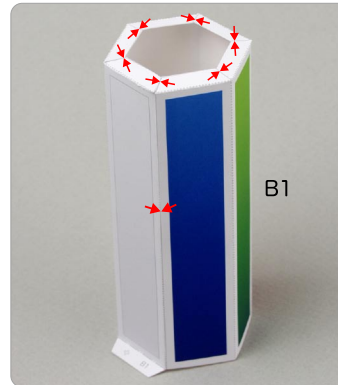

- ③ Slide the football onto the display stand, and your football money box is complete.

